


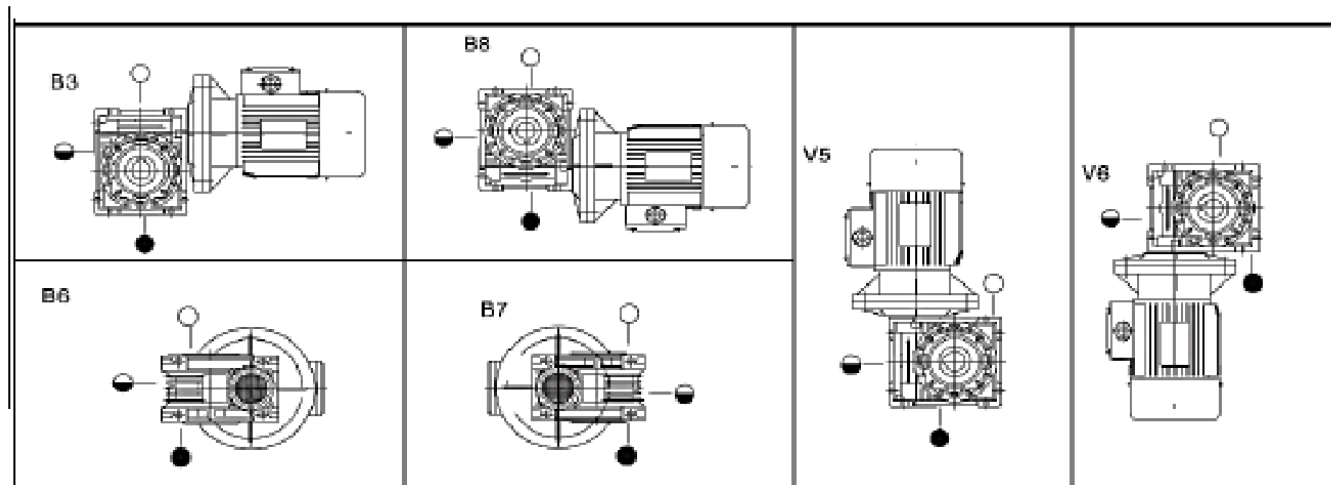

Oil fill quantity in litres						
Size	B3	B6	B7	B8	V5	V8
25	0.02	0.02	0.02	0.02	0.02	0.02
30	0.04	0.04	0.04	0.04	0.04	0.04
40	0.08	0.08	0.08	0.08	0.08	0.08
50	0.15	0.15	0.15	0.15	0.15	0.15
63	0.30	0.30	0.30	0.30	0.30	0.30
75*	0.55	0.55	0.55	0.55	0.55	0.55
90*	1.00	1.00	1.00	1.00	1.00	1.00
110*	3.00	2.50	2.50	2.20	3.00	2.20
130*	4.50	3.50	3.50	3.30	4.50	3.30
150*	7.00	5.40	5.40	5.10	7.00	5.10

* Always check oil level is half way up sight glass, in some mounting positions it may be necessary to add or remove some oil.