



Installation - Dimensions

B5

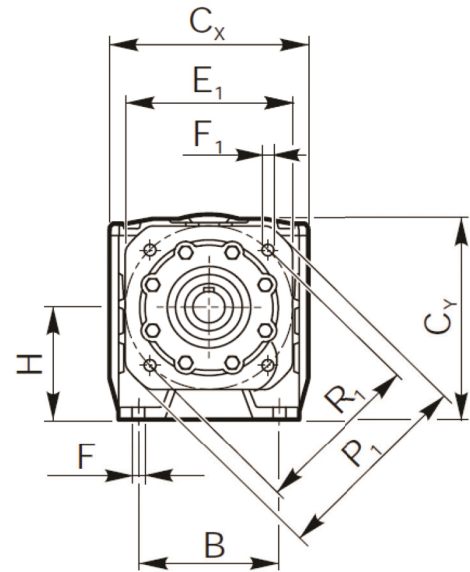

	RD42	RD43	RD52	RD53	RD62	RD63
A	195		205		260	
B	150		170		215	
C_x	215		284		340	
C_y	222		255		302	
D_1 h6	28		38		48	
D_2 h6	35 - 40		40 - 50		50 - 60	
E	142		180		180	
E_1	165 (215) [265]		215 (265) [300]		215 (265) [300]	
F	13.5		18		18	
F_1	11 (13.5) [17]		13.5 (17.5) [17.5]		13.5 (17.5) [17.5]	
G g6	95		130		130	
G_1 h7	130 (180) [230]		180 (230) [250]		180 (230) [250]	
H	130		140		180	
I	13.5		0		0	
L_1	60		80		100	
L_2	70 (80)		80 (100)		100 (120)	
M_1	31		41		51.5	
M_2	38 - 43		43 - 53.5		53.5 - 64	
N_1	8		10		14	
N_2	10 - 12		12 - 14		14 - 18	
P	145		190		190	
P_1	200 (250) [300]		250 (300) [350]		250 (300) [350]	
Q	265	305	353 [367]		410 [424]	
R	130		165		165	
R_1	165 (215) [265]		215 (265) [300]		215 (265) [300]	
S	30		35 [49]		40 (54)	
S_1	40	80	82		79	
U_1	4 (4) [4]		4 (4) [4]		4 (4) [4]	
V	M8x18 (n° 8)		M10x25 (n° 8)		M10x25 (n° 8)	
V_1	M10x22		M12x28		M16x36	
V_2	M10x22 - M12x28		M12x28 - M16x36		M16x36 - M20x42	
Z	15		18		18	
Kg	20	21.5	49	52	62	70

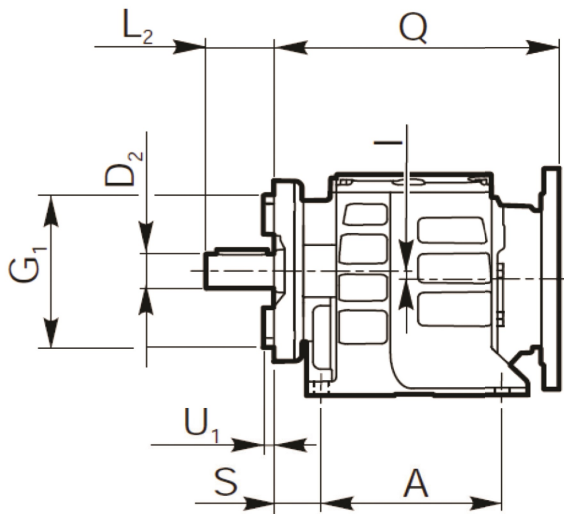

Two reduction stages
Three reduction stages

Motorcontrolwarehouse.co.uk
01686 688948



The Motor Control Warehouse