





Brake Motor Connections

400V Star Connections.


1/2 Wave 102V brake. Phase and Star point

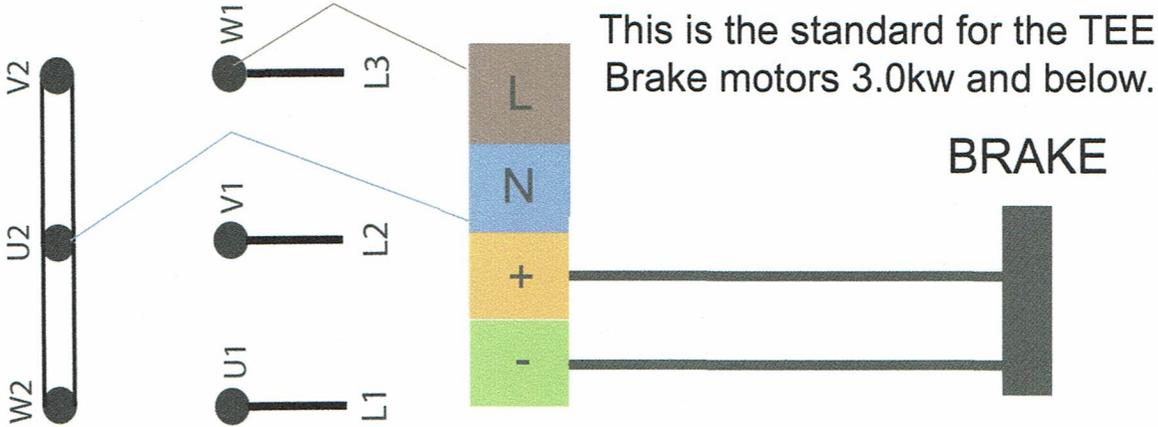

1/2 Wave 178V/190V brake. Phase and Phase connection

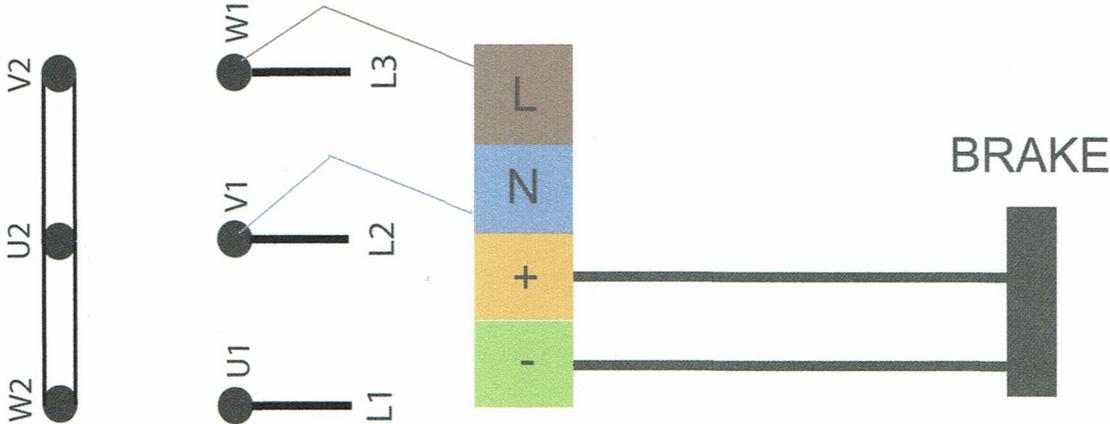

Full Wave 178v/190v brake. Phase and Star point connection

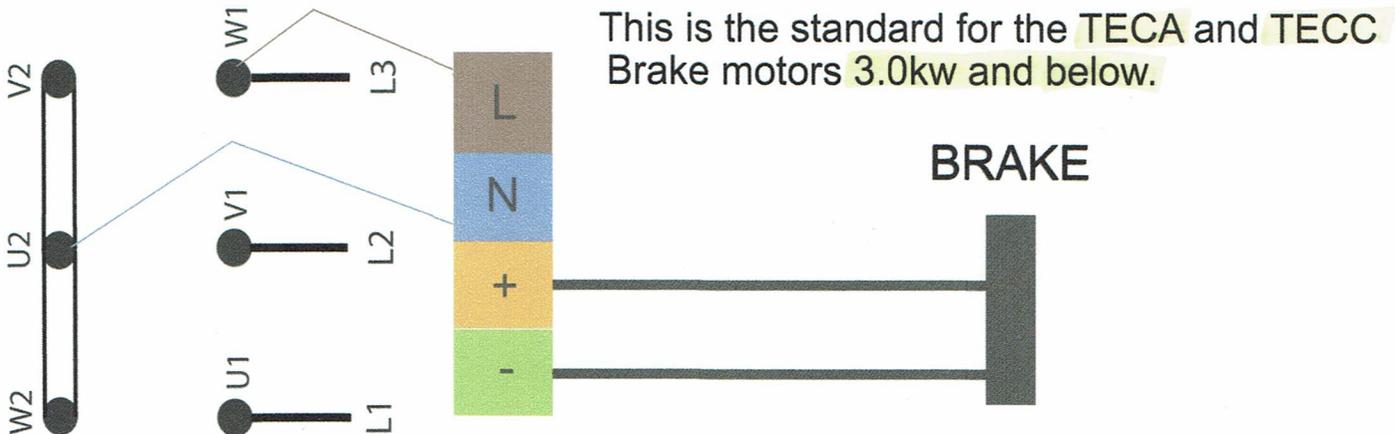

Brake can also be separately supplied. Motors with a Star/Delta starter must have a separate supply to the brake.

TEC Electric Motors Ltd

Unit 1, Building 341 • Rushock Trading Estate • Rushock, Droitwich • Worcestershire WR9 0NR
Telephone: **01299 252990** • Fax: **01299 250317** • Web: www.tecmotors.co.uk




Brake Motor Connections

400V Delta Connections.


1/2 Wave 102V brake. Phase from motor and separate neutral

This is standard for the TEE Brake motors 4.0kw and above.

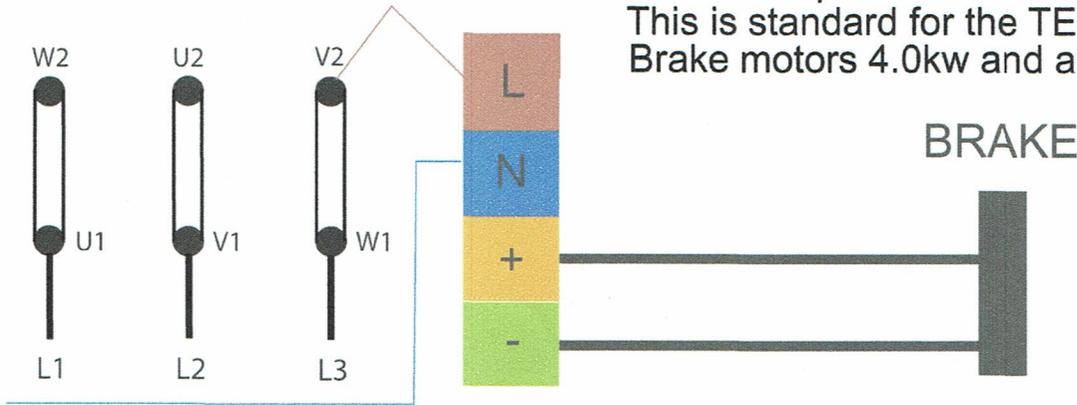


1/2 Wave 178V/190V brake. Phase and phase connections

This is standard for the TECA and TECC Brake motors 4.0kw and above.

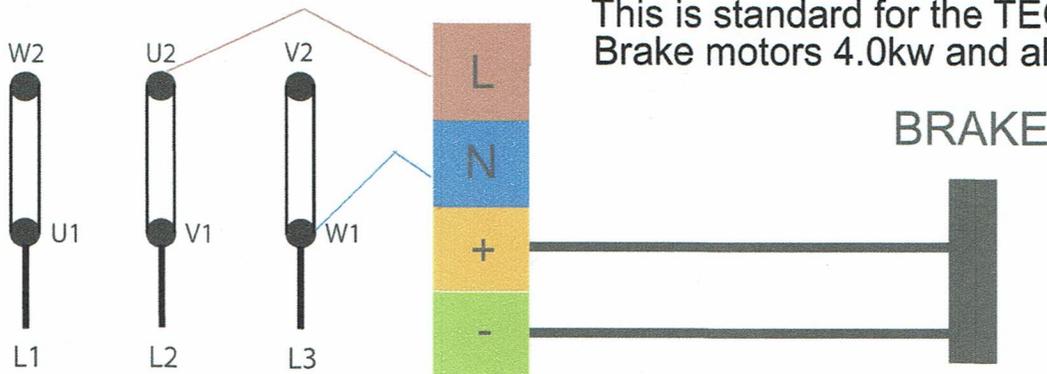

Full Wave 178V/190V brake. Phase from motor and separate neutral

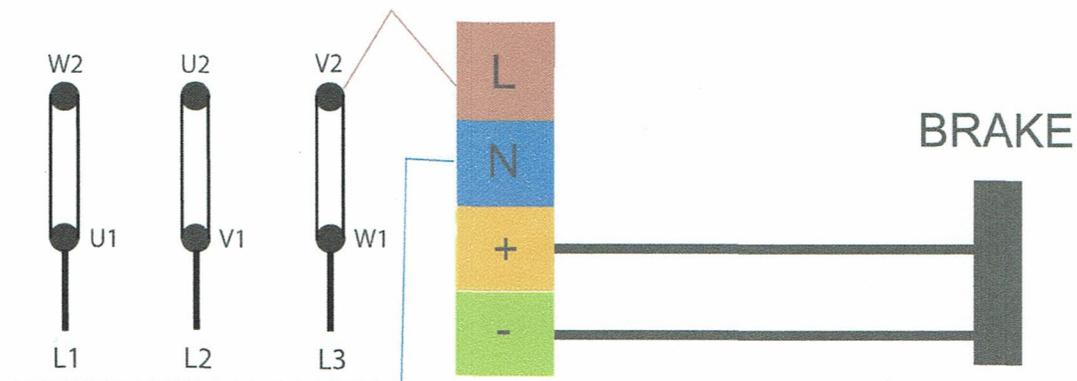

Brake can also be separately supplied. Motors with a Star/Delta starter must have a separate supply to the brake.

TEC Electric Motors Ltd

Unit 1, Building 341 • Rushock Trading Estate • Rushock, Droitwich • Worcestershire WR9 0NR
Telephone: **01299 252990** • Fax: **01299 250317** • Web: www.tecmotors.co.uk