


Installation - Dimensions

B3



	RD02	RD03	RD12	RD13	RD22	RD23	RD32	RD33
A	95		110		130		165	
B	80		110		110		135	
C _x	100		140		155		190	
C _y	111		131		158		198	
D ₁ h6	11		14		19		24	
D ₂ h6	17 - 20		20 - 25		25 - 30		30 - 35	
E	82		82		102		125	
E ₁	100 (115) [130]		100 (115) [130]		115 (130) [165]		130 (165) [215]	
F	9		9		9		11.5	
F ₁	7 (9) [9]		7 (9) [9]		9 (9) [11]		9 (11) [13]	
G g6	60		60		65		85	
G ₁ h7	80 (95) [110]		80 (95) [110]		95 (110) [130]		110 (130) [180]	
H	60		75		90		115	
I	4,5		5		6		8.5	
L ₁	23		30		40		50	
L ₂	35 (40)		40 (50)		50 (60)		60 (70)	
M ₁	12.5		16		21.5		27	
M ₂	19 - 22.5		22.5 - 28		28 - 33		33 - 38	
N ₁	4		5		6		8	
N ₂	5 - 6		6 - 8		8 - 8		8 - 10	
P	84		84		108		130	
P ₁	120 (140) [160]		120 (140) [160]		140 (160) [200]		160 (200) [250]	
Q	140	143	151	161	190	208	220	253
R	75		75		95		115	
R ₁	100 (115) [130]		100 (115) [130]		115 (130) [165]		130 (165) [215]	
S	20		18		25		30	
S ₁	25	28	23	33	35	53	25	58
U ₁	3 (3) [3]		3 (3) [3]		3 (3) [3]		3.5 (3.5) [3.5]	
V	M6x14 (n° 7)		M6x14 (n° 7)		M6x10 (n° 8)		M8x18 (n° 8)	
V ₁	M5x12		M5x12		M6x16		M8x19	
V ₂	M6x16 - M6x16		M6x16 - M6x16		M6x16 - M10x22		M10x22 - M10x22	
Z	13		10		13		13	
Kg	3.0	3.2	4.8	4.8	7.9	8.5	13.5	14.5

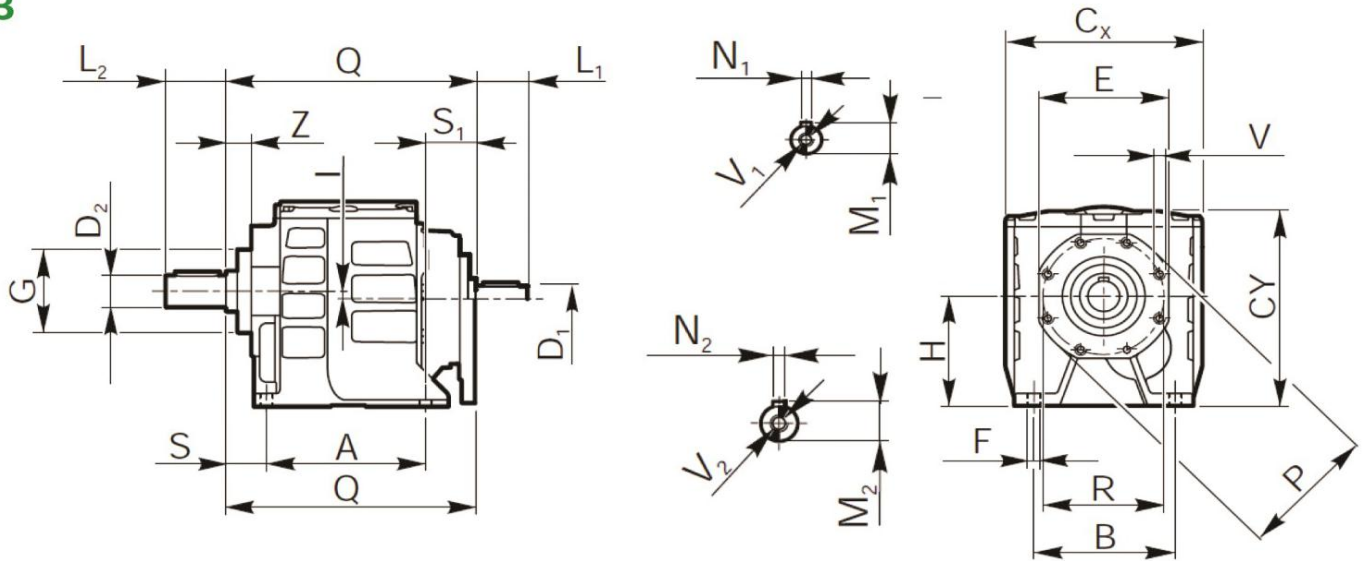

Two reduction stages
Three reduction stages

Motorcontrolwarehouse.co.uk
01686 688948